

Assembly Instructions

List of parts in fixings pack 1 x Roll of Felt (10m) 12 x 40mm Galvanised Nails 48 x 70mm Green Screws 26 x 50mm Green Screws 12 x 30mm Wire Nails 1 x Perspex Panel 100 x 15mm Felt Nails 14 x 60 mm Screws

PLEASE NOTE THERE MAY BE MORE SCREWS THAN REQUIRED

8' x 6'/6' x 4' - Apex Shed



With all buildings, it is important to provide a firm level base before assembling your shed. If a concrete base is being used we recommend this does not extend beyond the dimensions of the shed to stop water falling from the roof and collecting on the concrete base.



1. Place the floor section on the base you have prepared and fix the back panel to one side panel screwing through the vertical battens of the back panel into the battens on the side panel using three screws. Repeat when fitting the other side panel.

2. Fix the front panel (with door) to the two side panels as in part 1 using screws provided. After all the panels are fitted together, make sure it is all square and the cladding overlaps the floor.

3. Place one roof panel on to the top of the shed. The batten will fit into a central recess on the front and rear panels. Repeat for the other panel. Then screw into place using seven screws into each roof panel. Once the roof is screwed into place, fix the panels to the floor section. Use three screws for each side panel and two screws each for the front and back panels.

Handy Tip for good shed maintenance

Keep the areas surrounding your shed clear of any grass or vegetation including, pruning any trees overhead.


Hutton Garden and Landscaping Products

Church Lane, Northwood Green, Westbury-on-Severn, Gloucestershire GL14 1ND www.svw2000.co.uk/hutton

Tel: 01452 762089

Fax: 01452 760993 office@

office@hutton-ltd.co.uk

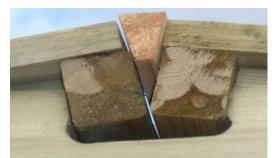



4. Fit the long fillet in the gap between the two roof panels as shown in the photo.

5. Fix on the four corner strips with three 40mm nails in each.

6. Measure the length of the roof panel and add 100mm for cutting the lengths of felt. (Three lengths will be needed). Once the felt is cut lay the pieces to overhang the side of the roof by at least 60mm. Lay the third piece of felt along the centre of the roof to overhang the other two pieces.

7. Nail the felt around the outside of the roof every 100mm.



8. Place the Perspex panel into the window frame using a suitable sealant, then nail the 20mm x 20mm interior beading strips into place starting with the bottom strip. For added protection we recommend using a clear silicone seal around the edge of the Perspex.

9. Fit fascia pieces into place with two screws in each to front and rear of shed.

Please read carefully

Your shed has been pressure preservative treated, which is designed to prevent rot and insect attack for up to 15 years and to give softwood construction and landscaping timber products an extended and low maintenance service life. The treatment is not intended to perform as a waterproofing agent.

When using pressure treated cladding timbers in the construction of sheds or garden buildings the following guidelines should be followed to help prevent any water ingress:

- 1. The Timber Research and Development Association (TRADA) recommends a 16-19mm nominal thickness for cladding timbers, this shed has a nominal cladding thickness of 19mm.
- 2. Fixings should only be driven marginally below the surface of the cladding timbers.
- 3. A suitable airflow should be allowed throughout the structure to assist on-going drying, during which it is perfectly normal for some shrinkage of the cladding timbers to occur.
- 4. The dry, external timbers can have a water ingress protection added with the application of an appropriate and well maintained water repellent coating. This would involve a proprietary water repellent coating product which could be applied to the dry external timbers following the relevant manufacturer's guidelines. Recommended products include Thompson's WaterSeal, Hickson Decor Wax Coat and RESTOL Wood Oil.
- 5. For added protection and waterproofing we recommend using a clear silicone seal around the edge of the Perspex & corners before fixing on the corner strips

Hutton Garden and Landscaping Products

Church Lane, Northwood Green, Westbury-on-Severn, Gloucestershire GL14 1ND www.svw2000.co.uk/hutton

Tel: 01452 762089

Fax: 01452 760993

office@hutton-ltd.co.uk

Product Care

All Hutton products, where appropriate, come with easy to follow instructions. Please take time to read these carefully before assembling.

Hutton products are built to last with high quality timber to refined designs. Joinery standards are second to none with professional carpenters using pressure treated softwood that offers long-lasting protection against rot, insect and fungal attack.

Although the TANALITH wood preservative used in the pressure-treatment process is of the highest quality, it doesn't protect timber from the effects of weather.

Without additional protection UV rays from the sun will weather timber changing the colour to silvery grey. Moisture will negatively affect the lifespan and performance of a timber product, so it's essential to add a high-quality protective water-repellent coating to your Hutton product.

Here are our tips and advice for getting the best out of your product.



Softwood is a natural product that can twist or warp through changes in climatic conditions. To minimise this, Hutton products should always be sited on firm and level ground that is away from areas where water collects.




During the pressure-treatment process, some grain may be raised. If desired this can be removed with a little light sanding.



Green marking may become visible as salt leaves the timber whilst it dries following pressure treatment. It will fade over time and does not affect the performance of the product. Remove any of this solid salt residue with a wire brush or light sanding prior to painting. A micro-porous (breathable) coating will allow any further moisture to evaporate out through the paint.

Changes in the weather may cause fixings to loosen but these can be tightened up as appropriate.

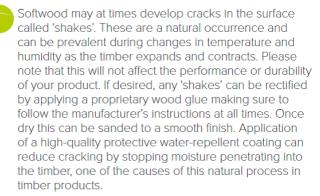



Over time the colour of your Hutton product will gradually weather, first to a honey brown and then to a silver grey. This does not indicate any loss of preservative protection. To keep the original colour of your timber you will need to apply a clear wood paint, oil, or stain, that has UV blockers to stop the greying process.



A quality wood paint or oil can be applied to your product to provide protection and colour. Garden designs can benefit from a coloured timber product whether it be a bench, arch, arbour or building, complimenting planting and adding year-round colour. Apply in dry weather and follow the manufacturer's full recommendations. Some staining can occur on paint coatings as tannins and/ or sap/resin come out of the new timber. This is a natural process but a stain-blocking primer and/or knotting agent can be applied prior to painting to minimise potential staining.



Pressure treated products can be painted with a highquality wood treatment as long as the moisture content is below 18%. Always check with the manufacturer as some treatments can cause the timber to warp or split if it hasn't fully dried.



Sheds are pressure treated but will need additional protection from the weather and in particular, moisture penetration. Apply a high-quality water-repellent paint or oil to help seal the shed, making sure that joints and fixings such as nails and screws, are well covered. A good microporous coating will allow any internal moisture to evaporate out through the external coating.



When applying a wood paint, oil, or stain, pay particular attention to horizontal surfaces and areas that can collect water. Coatings will degrade quickest on a horizontal plane with cheaper products wearing faster. Vertical surfaces can last for years before a maintenance coat is required.



Maintain your timber product on an annual basis, or sooner if required. Clean paint coatings with soapy water and apply a maintenance coat when required. The better the quality the more years it will be before a maintenance coat is needed. Untreated timber products should be cleaned with soapy water or a wood cleaner.



In the unlikely event a product is faulty or damaged upon delivery, any issue must be advised within a reasonable period. The definition of reasonable depends on the product and how obvious the fault is, however, even with more complex items you should work on the basis that this is no more than three to four weeks from receipt. This does not affect your statutory rights.



Whilst your delivery driver is present ensure that you check your shipment before signing the delivery receipt, as notifications of damages or shortages should be noted on the signed proof of delivery.



To view our tutorial videos on product maintenance, please visit www.svw2000.co.uk/you-tube-videos